



## Headlights




### ► U.S.A



- 1 **DRILL OFF** Turn off the daytime running light system.
- 2 **AUTO** The headlights and parking lights turn on/off automatically in accordance with ambient light levels.
- 3  The instrument panel, side marker, parking, tail and license plate lights turn on.
- 4  The headlights and all lights listed above turn on.

### ► Canada



- 1  Off
- 2 **AUTO** The headlights and parking lights turn on/off automatically in accordance with ambient light levels.
- 3  The instrument panel, side marker, parking, tail and license plate lights turn on.
- 4  The headlights and all lights listed above turn on.




To engage the high beams, push the lever forward. To flash the high beams temporarily, pull the lever toward you.

## Automatic High Beam (If Equipped)

The Automatic High Beam uses an in-vehicle camera sensor to assess the brightness of streetlights, the lights of oncoming and preceding vehicles, etc., and automatically turns high beam on or off as necessary.



1 Headlight switch in "AUTO" position.

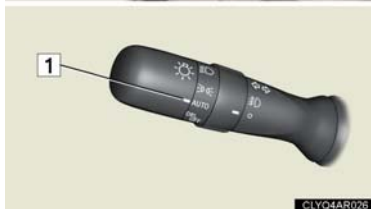

2 Push the lever away from you.

When all of the following conditions are fulfilled, high beam will be automatically turned on (after approximately 1 second):

Vehicle speed is above approximately 20 mph (32 km/h).

The area ahead of the vehicle is dark.

There are no oncoming or preceding vehicles with headlights or tail lights turned on.

## Windshield Wipers and Washer

### n Intermittent wiper with interval adjuster (if equipped)



- |   |  |                        |
|---|--|------------------------|
| 1 |  | Off                    |
| 2 |  | Intermittent operation |
| 3 |  | Low speed              |
| 4 |  | High speed             |
| 5 |  | Single wipe            |



CLYQGAR641



CLYQGAR120

Intermittent operation: Wiper interval can be adjusted by turning the band.



CLYQGAR610

To spray washer fluid, pull the lever. The wipers will operate automatically.


n Rain-sensing windshield wipers (if equipped)



- 1 Off
- 2 Automatic operation
- 3 Low speed
- 4 High speed
- 5 Single wipe



Sensitivity can be adjusted by turning the band.

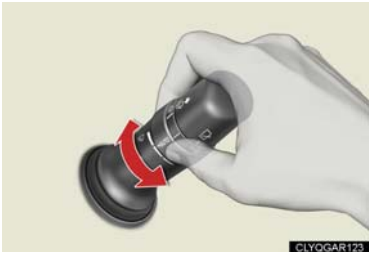






To spray washer fluid, pull the lever. The wipers will operate automatically.



## Rear Window Wiper and Washer

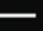

- 1  Off
- 2  Intermittent window wiper operation
- 3  Normal window wiper operation
- 4  Washer/wiper dual operation
- 5  Washer/wiper dual operation

